

PlayStation 3 Adapter Cable for the Quasimoto Arcade Controller

To connect your arcade machine to the PlayStation 3 you will need to use the original PlayStation 2 adapter cable that was included with your arcade machine. Refer to the diagram to the right for connection instructions.. Connect the new adapter to any available USB port on your PlayStation 3.

NOTES:

1. NEVER USE THE INCLUDED PS3/XBOX 360 EXTENSION CABLE TO CONNECT TO ANY GAME SYSTEM BESIDES THE PLAYSTATION 3 OR XBOX360. DOING SO MAY DAMAGE YOUR PLAYSTATION 2.


2. The analog mode needs to be ON for the PlayStation 3 adapter to work (red LED light on the control panel indicates if the analog mode is on or off). If your controller does not have the analog mode button, you will need to hardwire the analog together using the included jumper cable (see alternate instructions). If your controller

has the analog mode button and you do not wish to press the analog mode button every time the system reboots, the hardwire connection can still be accomplished by removing the disconnects on the switch terminal and using the included jumper cable (refer to alternate instructions for more information).

3. Repeat the process for your Player 2 connections. The PS2 to PS3 adapter system requires 2 free USB ports on your PlayStation 3.

4. Connecting an Xbox 360 system requires an extra adapter available from Quasimoto. Call for details.

If you have any questions, please call us toll free at 888-400-5774 or visit us at www.quasimoto.com.

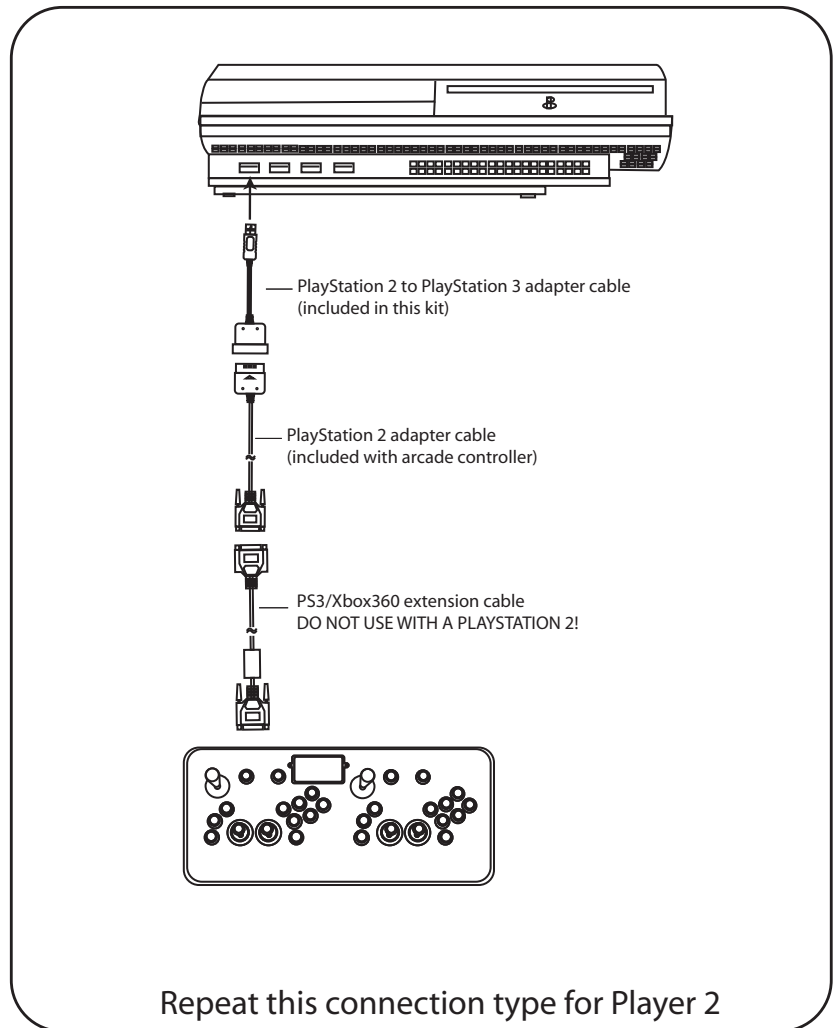

QUASIMOTO™